


Installation Guide



Banner Poles - Wall Mounted - Standard

0.75m

Banner Pole Dimensions

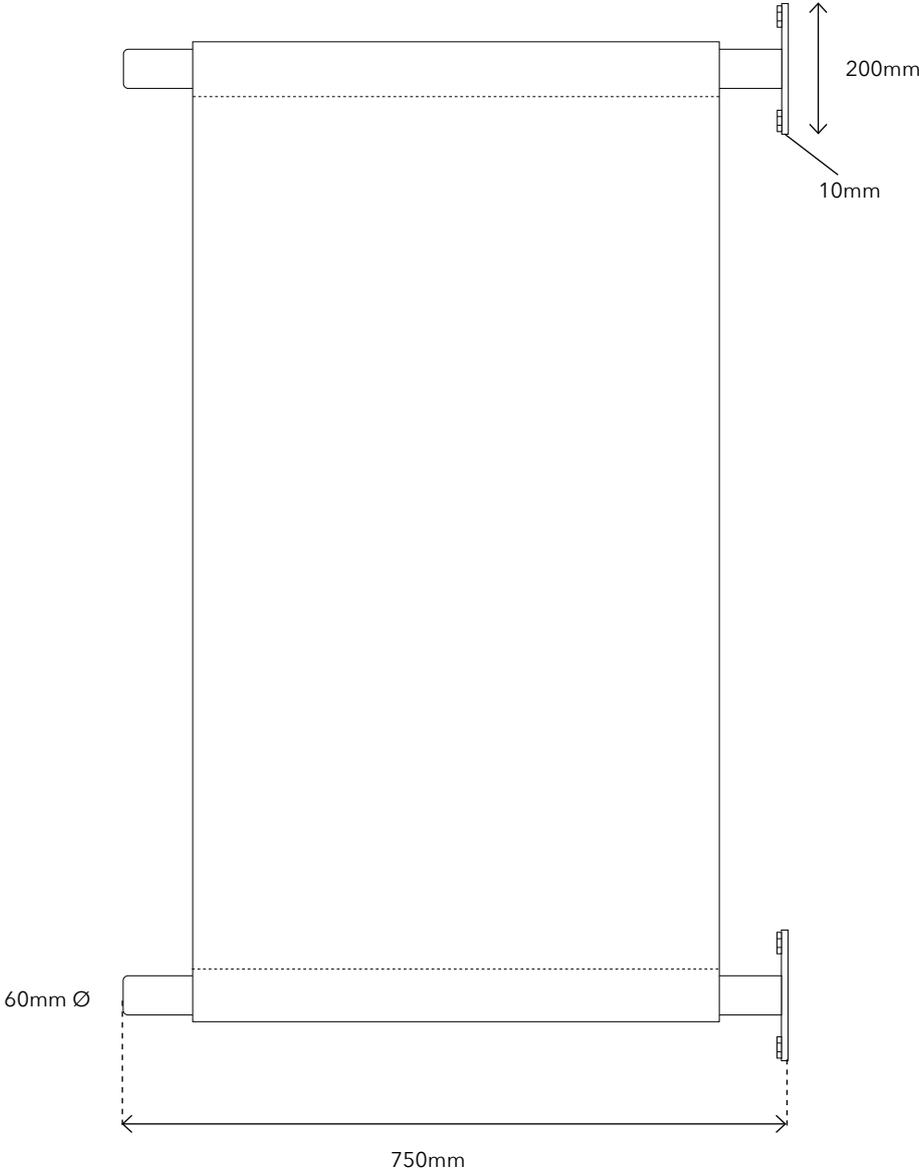


Banner Poles - Wall Mounted - Standard

Parts Checklist

- A 1 x Banner
- B 2 x Wall Mounted Arm

NB: Wall fixings are dependant on wall material and therefore to be supplied by the client/installer

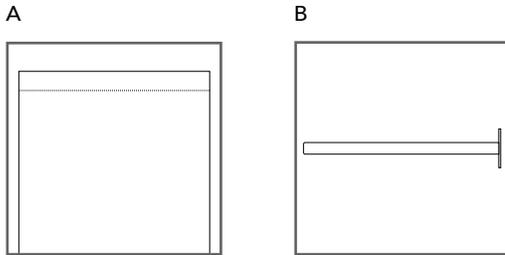

Step 1

Before starting to fix a wall-mounted banner arm, the client needs to assess the construction of the wall, ensuring that it is strong enough to carry the load of the banner arm. Bear in mind that the banner may be subject to wind loading. It is your responsibility to ensure that the wall and the fixings that you use are fit for purpose. If necessary, drill test holes in the wall to assess its construction and make sure that you carefully select the appropriate fixings for the job.

Step 2

With the aid of either a safely and correctly positioned access platform or ladder, the installation of the banner arms can proceed. Measure and mark the positions of the top wall mounted arm.

Step 3

Take one of the wall mount arms to the top location and offer up to the wall, so that the hole locations can be marked using the back plate as a template. Put the arm to one side and proceed to drill one hole to the required size to suit the fixing you are going to use.


Step 4

Fix the bolt/fixing into the hole as recommended and offer the back plate back over the bolt, and after squaring up the plate lock up tight with either nut or bolt. Using the other holes in the back plate as template proceed to drill the other 3 holes to the required size, proceed to loosen off the one bolt to spin/lift off the plate to gain access to the 3 holes to fit the 3 bolts. Once this has been done (in the case of resin anchor if used, allow resin to set) and the fixings are in place, offer the back plate over the bolts/fixings and tighten them fully home. Repeat operations for the lower wall mount arm.

Step 5

Slide the banner over the top banner arm as shown in diagram (a). Then insert the lower banner arm into the bottom sleeve and pull taught against the wall, proceed to mark out fixing positions and repeat step 4.

Diagram A

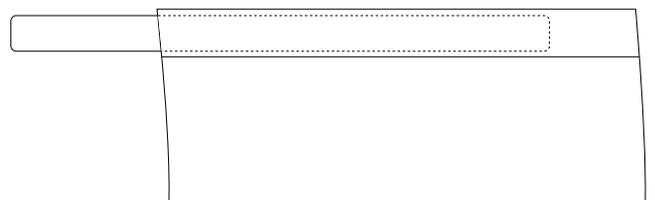

To change the banners, loosen the lower banner arm to remove tension, replace the banner and proceed to re-tension fixings.

NB: The banner and all fixings should be checked within 1 month and if necessary, adjusted and re-tightened, further checks should take place every 6 months thereafter. This guide is for information only and no warranty is either given or implied, the responsibility is with the client to ensure that they have selected an appropriate wall and have correctly installed the banner arm. Please note that for larger drop banners and wider banners, the steel work sizes will change.